



2. If the call and emergency signal is given, the M.C.A. is supplied with the control unit, and it will also feed the auxiliary circuits should the start of the M.C.A. the control switch is closed and the "M.G. Set" button pressed. This provides a path for current from the battery to the "setting" coils of all Motor Alternators. These close