




Installation and Wiring Instructions for MINIFLOOD OR1150 & ORB1150

OR 1150/ORB 1150

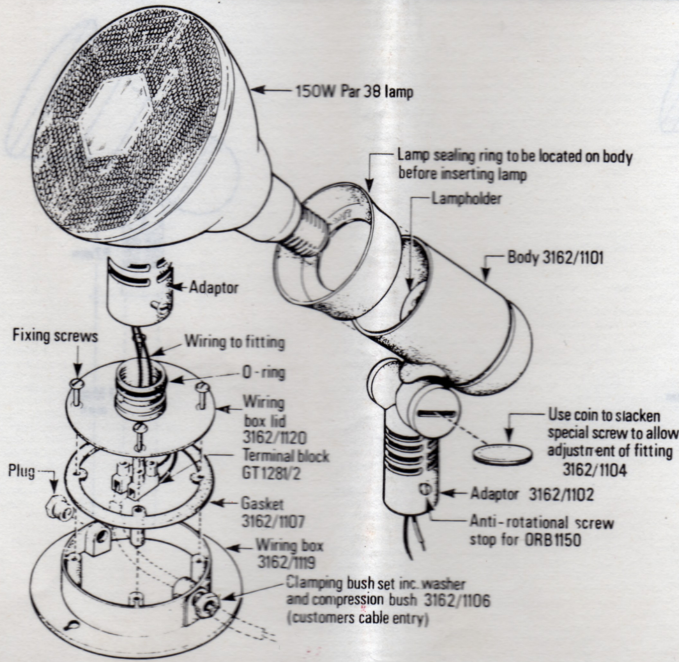


OR 1150 FLOODLIGHT




This version which is supplied with 2 single core high temperature cables each 1 metre in length, but no lamp or mounting bracket, is designed primarily for conduit mounting. The fixing adaptor is threaded for direct fixing to 20mm conduit.

ORB 1150 FLOODLIGHT


This version is supplied complete with mounting base/wiring box (Cat. No. OR1) and a PAR 38 150W flood lamp.

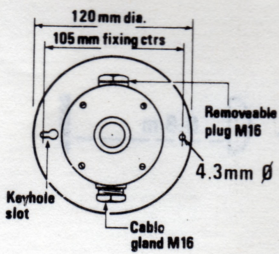

OR 1

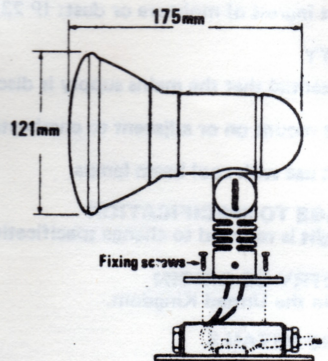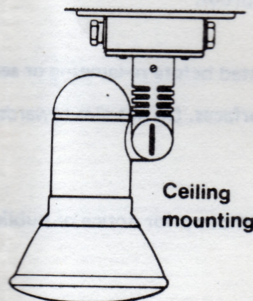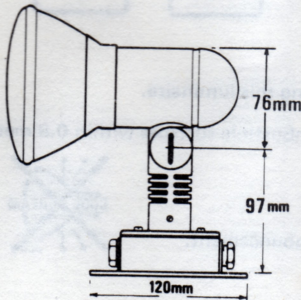


- To gain access to terminal block remove 4 screws from top of base/wiring box lid.
- Connect 2 core sheathed cable (max O/D 7 mm) brought in via M16 cable gland to terminal block.

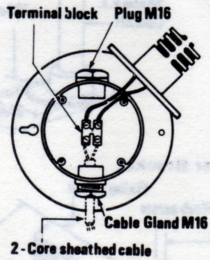

If it is required to loop to a subsequent luminaire the M16 plug should be removed and replaced by a second M16 cable gland (not supplied).

- Tighten and seal cable gland and replace top. Ensure gasket to mounting base/wiring box is correctly located and tighten four retaining screws.
- Aiming can be achieved in both azimuth and elevation.
- Push gasket (ORS) onto fitting – 'FRONT towards installer'

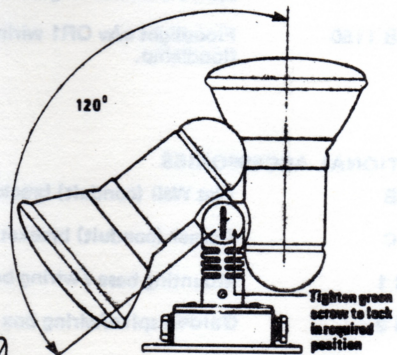

Ensure cable is kept clear of lamp

